



## Electrohydraulic actuators for valves

with a 20 mm stroke

**SKD32..**  
**SKD82..**  
**SKD62..**  
**SKD60**

- **SKD32..** Operating voltage AC 230 V, 3-position control signal
- **SKD82..** Operating voltage AC 24 V, 3-position control signal
- **SKD6..** Operating voltage AC 24 V, control signal DC 0...10 V, 4...20 mA or 0...1000 Ω
- **SKD6..** Choice of flow characteristic, position feedback, stroke calibration, LED status indication, override control
- **SKD62UA** with functions choice of direction of operation, stroke limit control, sequence control with adjustable start point and operating range, operation of frost protection monitors QAF21.. and QAF61..
- **Positioning force 1000 N**
- **Actuator versions with or without spring-return function**
- **For direct mounting on valves; no adjustments required**
- **Manual adjuster and position indicator**
- **Optional functions with auxiliary switches, potentiometer, stem heater and mechanical stroke inverter**
- **SKD..U are UL-approved**

### Use

For the operation of Siemens 2-port and 3-port valves, types VVF.., VVG.., VXF.. and VXG.. with a 20 mm stroke as control and safety shut-off valves in heating, ventilation and air conditioning systems.

## Types

	Type	Operating voltage	Positioning signal	Spring-return		Positioning time		Enhanced functions
				Function	Time	Opening	Closing	
Standard electronics	<b>SKD32.50</b>	AC 230 V	3-position			120 s	120 s	
	<b>SKD32.51</b> <sup>2)</sup>			yes	8 s	30 s	10 s	
	<b>SKD32.21</b> <sup>2)</sup>							
	<b>SKD82.50</b>	AC 24 V				120 s	120 s	
	<b>SKD82.50U</b> *							
	<b>SKD82.51</b>			yes	8 s			
Enhanced electronics	<b>SKD82.51U</b> *							
	<b>SKD62</b> <sup>2)</sup>	AC 24 V	DC 0...10 V, 4...20 mA, or 0...1000 Ω	yes	15 s	30 s	15 s	yes <sup>1)</sup>
	<b>SKD62U</b> *							
	<b>SKD60</b>							
<b>SKD62UA</b> *	yes			15 s				

<sup>1)</sup> Direction of operation, stroke limit control, sequence control, signal addition

<sup>2)</sup> Control devices MK..5.., MK..6.. and MK..5..G are TÜV tested as per DIN EN 14597 and can therefore be used as control devices with safety shut-off function for protection against excessive temperature and pressure.

\* UL-approved versions

## TÜV tested as per DIN EN 14597

Product number	Stock number	Description	Data sheet
MK..5..	S55329-M1..	Control device PN 25 for safety function per DIN EN 14597, for water	N4387
MK..6..	S55329-M1..	Control device PN 40 for safety function per DIN EN 14597, for water, steam, brine and heat transfer oil	N4388
MK..5..G	S55329-M1..	Control device PN 25 for safety function per DIN EN 14597, for steam	N4389

## Accessories

Type	Description	For actuator	Mounting location
<b>ASC1.6</b>	Auxiliary switch	SKD6..	1 x ASC 1.6
<b>ASC9.3</b>	Dual auxiliary switches	SKD32.. SKD82..	1 x ASC9.3 or
<b>ASZ7.3</b>	Potentiometer 1000 Ω		1 x ASZ7.3 or
<b>ASZ7.31</b>	Potentiometer 135 Ω		1 x ASZ7.31 or
<b>ASZ7.32</b>	Potentiometer 200 Ω		1 x ASZ7.32
<b>ASZ6.5</b>	Stem heater AC 24 V	SKD..	1 x ASZ6.5
<b>ASK50</b>	Mechanical stroke inverter		1 x ASK50

## Ordering

When ordering please specify the quantity, product name and type code.

*Example: 1 actuator, type SKD32.50 and*

*1 potentiometer, 135 Ω, type ASZ7.31*



## Delivery

The actuator, valve and accessories are supplied in separate packaging and not assembled prior to delivery.

## Spare parts

See overview, section «Replacement parts», page 17.

## Equipment combinations

Valve type		DN	PN-class	$k_{vs}$ [m <sup>3</sup> /h]	data sheet
 <b>Two-port valves VV...</b> (control valves or safety shut-off valves):					
VVF21..	Flange	25...80	6	1.9...100	4310
VVF31..	Flange	15...80	10	2.5...100	4320
VVF40..	Flange	15...80	16	1.9...100	4330
VVF41..	Flange	50	16	19...31	4340
VVF53..	Flange	15...50	25	0.16...40	4404
VVF52..	Flange	15...40	25	0.16...25	4373
VVF61..	Flange	15...25	40	0.19...7.5	4382
VVG41..	Threaded	15...50	16	0.63...40	4363
 <b>Three-port valves VX...</b> (control valves for «mixing» and «diverting»):					
VXF21..	Flange	25...80	6	1.9...100	4410
VXF31..	Flange	15...80	10	2.5...100	4420
VXF40..	Flange	15...80	16	1.9...100	4430
VXF41..	Flange	15...50	16	1.9...31	4440
VXF53..	Flange	15...50	25	1.6...40	4405
VXF61..	Flange	15...25	40	1.9...7.5	4482
VXG41..	Threaded	15...50	16	1.6...40	4463


For admissible differential pressures  $\Delta p_{max}$  and closing pressures  $\Delta p_s$ , refer to the relevant valve data sheets.

**Note** Third-party valves with strokes between 6...20 mm can be motorized, provided they are «closed with the de-energized» fail-safe mechanism and provided that the necessary mechanical coupling is available. The Y1 signal must be routed via an additional freely-adjustable end switch (ASC9.3) to limit the stroke. We recommend that you contact your local Siemens office for the necessary information.

**Rev. no.** Overview table, see page 17.

## Technology


### Principle of electro-hydraulic actuators

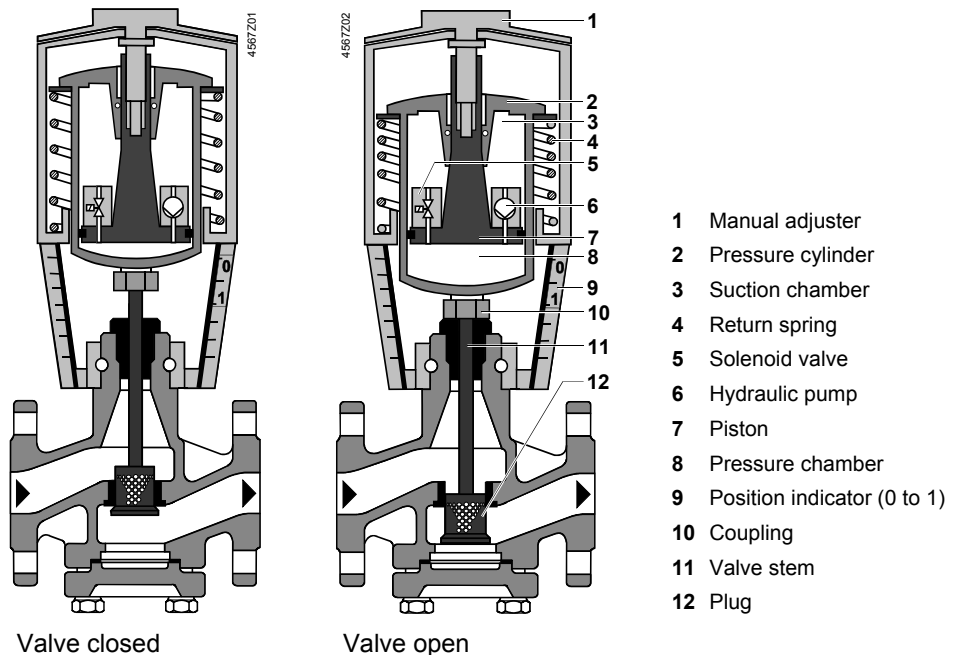

**Opening the valve** The hydraulic pump (6) forces oil from the suction chamber (3) to the pressure chamber (8) and thereby moving the pressure cylinder (2) downwards. The valve stem (11) retracts and the valve opens. Simultaneously the return spring (4) is compressed.





Closing the valve	Activating the solenoid valve (5) allows the oil in the pressure chamber to flow back into the suction chamber. The compressed return spring moves the pressure cylinder upwards. The valve stem extends and the valve closes
Manual operation mode	Turning the manual adjuster (1) clockwise moves the pressure cylinder downwards and opens the valve. Simultaneously the return spring is compressed. In the manual operation mode the control signals Y and Z can further open the valve but cannot move to the «0%» stroke position of the valve. To retain the manually set position, switch off the power supply or disconnect the control signals Y and Z. The red indicator marked «MAN» is visible.
Note: Controller in manual operation	When setting the controller for a longer time period to manual operation, we recommend adjusting the actuator with the manual adjuster to the desired position. This guarantees that the actuator remains in this position for that time period. Attention: Do not forget to switch back to automatic operation after the controller is set back to automatic control.
Automatic mode	Turn the manual adjuster counterclockwise to the end stop. The pressure cylinder moves upward to the «0%» stroke position of the valve. The red indicator marked «MAN» is no longer visible.
Minimal volumetric flow	The actuator can manually be adjusted to a stroke position > 0 % allowing its use in applications requiring constantly a minimal volumetric flow.
<b>Spring-return facility</b>	The SKD32.51, SKD32.21, SKD82.51U.. and SKD62.. actuators, which feature a spring-return function, incorporate an additional solenoid valve which opens if the control signal or power fails. The return spring causes the actuator to move to the «0 %» stroke position and closes the valve.
TÜV tested as per DIN EN 14597	TÜV tested control devices per DIN EN 14597 can therefore be used as control devices with safety shut-off function for protection against excessive temperature and pressure. <ul style="list-style-type: none"> <li>▪ Water: MK..5.., PN 25, see data sheet N4387</li> <li>▪ Steam: MK..5..G, PN 25, see data sheet N4389</li> <li>▪ Water, steam, brine and heat transfer oil: MK..6.., PN40, see data sheet N4388</li> </ul>
<b>SKD32../SKD82..</b> 3-position control signal	The valve is controlled by a 3-position signal either via terminals Y1 or Y2 and generates the desired stroke by means of above described principle of operation. <ul style="list-style-type: none"> <li>• Voltage on Y1                      piston extends                      valve opens</li> <li>• Voltage on Y2                      piston retracts                      valve closes</li> <li>• No voltage on Y1 and Y2      piston / valve stem remain in the respective position</li> </ul>
<b>SKD62.., SKD60</b> Y control signal DC 0...10 V and/or DC 4...20 mA, 0...1000 Ω	The valve is either controlled via terminal Y or override control Z. The positioning signal Y generates the desired stroke by means of above described principle of operation. <ul style="list-style-type: none"> <li>• Signal Y increasing:              piston extends                      valve opens</li> <li>• Signal Y decreasing:              piston retracts                      valve closes</li> <li>• Signal Y constant:                piston / valve stem remain in the respective position</li> <li>• Override control Z                see description of override control input, page 8</li> </ul>
Frost protection monitor Frost protection thermostat	A frost protection thermostat can be connected to the SKD6.. actuator. The added signals from the QAF21.. and QAF61.. require the use of SKD62UA actuators. Notes on special programming of the electronics are described under «Enhanced electronics» on page 5.  «Connection diagrams» for operation with frost protection thermostat or frost protection monitor refer to page 14.

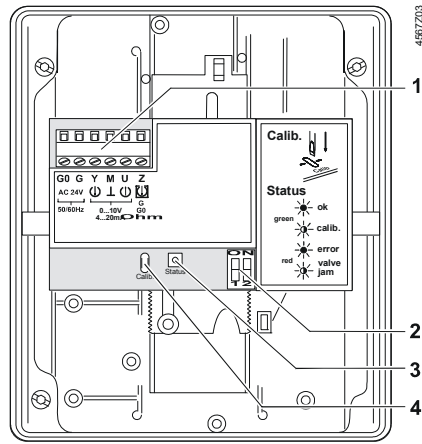**Standard electronics**  
SKD62..., SKD60




- 1 Connection terminals
- 2 Mode DIL switches
- 3 LED status indication
- 4 Slot for calibration

**DIL switches**  
SKD62..., SKD60


	Positioning signal Y Position feedback U	Flow characteristic
<b>ON</b>	 DC 4...20 mA	 lin = linear
<b>OFF *)</b>	 DC 0...10 V	 log = equal percentage

\*) Factory setting:  
All switches OFF

Relationship  
between control  
signal Y and  
volumetric flow

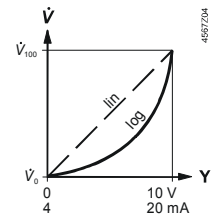

**Enhanced electronics**  
SKD62UA

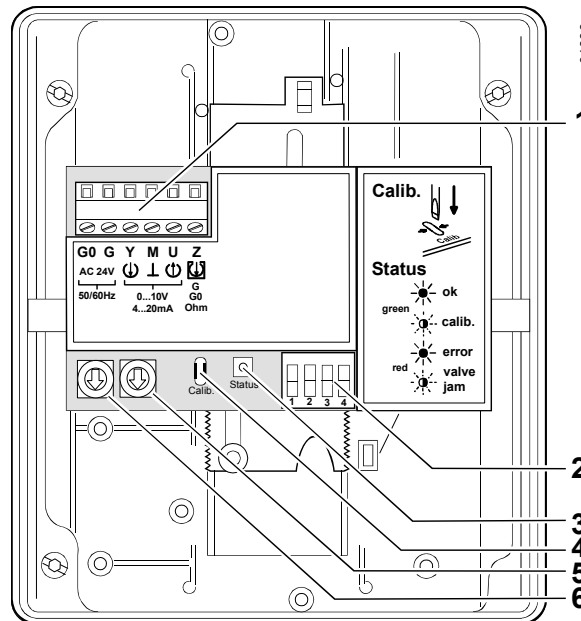


- 1 Connection terminals
- 2 DIL switches
- 3 LED status indication
- 4 Stroke calibration
- 5 Rotary switch **Up** (factory setting 0)
- 6 Rotary switch **Lo**

**DIL switches**  
SKD62UA

	Direction of operation	Sequence control or stroke limit control	Control signal Y Position feedback U	Flow characteristic
<b>ON</b>	reverse-acting	Sequence control Signal addition QAF21../QAF61..	DC 4...20 mA	lin = linear
<b>OFF *</b>	direct-acting	Stroke limit control	DC 0 ...10 V	log = equal percentage



\* Factory settings: all switches OFF

Relationship between control signal Y and volumetric flow

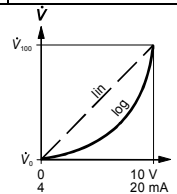

Selection of direction of operation  
SKD62UA

- With normally-closed valves, «direct-acting» means that with a signal input of 0 V, the valve closes (applies to all Siemens valves listed under «equipment combinations» on page 3)
- With normally-open valves, «direct-acting» means that with a signal input of 0 V, the valve is open.

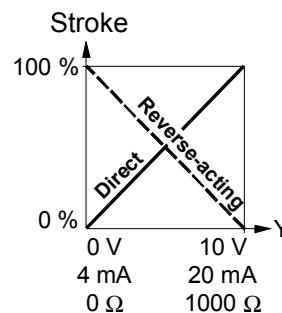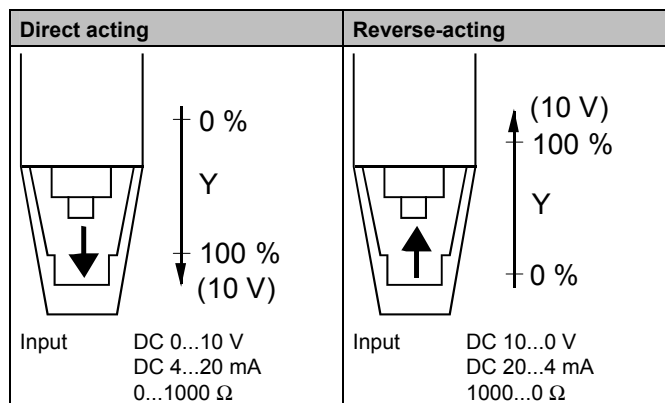

Note

The mechanical spring-return function is not affected by the direction of operation selected.

Stroke limit control and sequence control  
SKD62UA

Setting the stroke limit control			
The rotary switches LO and UP can be used to apply an upper and lower limit to the stroke in increments of 3%, up to a maximum of 45%			
Position of LO	Lower stroke limit	Position of UP	Upper stroke limit
0	0 %	0	100 %
1	3 %	1	97 %
2	6 %	2	94 %
3	9 %	3	91 %
4	12 %	4	88 %
5	15 %	5	85 %
6	18 %	6	82 %
7	21 %	7	79 %
8	24 %	8	76 %
9	27 %	9	73 %
A	30 %	A	70 %
B	33 %	B	67 %
C	36 %	C	64 %
D	39 %	D	61 %
E	42 %	E	58 %
F	45 %	F	55 %


Setting the sequence control			
The rotary switches LO and UP can be used to determine the starting point or the operating range of a sequence.			
Position of LO	Starting point for sequence control	Position of UP	Operating range of sequence control
0	0 V	0	10 V
1	1 V	1	10 V *
2	2 V	2	10 V **
3	3 V	3	3 V ***
4	4 V	4	4 V
5	5 V	5	5 V
6	6 V	6	6 V
7	7 V	7	7 V
8	8 V	8	8 V
9	9 V	9	9 V
A	10 V	A	10 V
B	11 V	B	11 V
C	12 V	C	12 V
D	13 V	D	13 V
E	14 V	E	14 V
F	15 V	F	15 V

\* Operating range of QAF21.. (see below)

\*\* Operating range of QAF61.. (see below)

\*\*\* The smallest adjustment is 3 V; control with 0...30 V is only possible via Y.

Stroke control with  
QAF21.. / QAF61..  
signal addition  
SKD62UA only

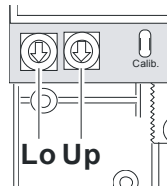

Setting the signal addition			
The operating range of the frost protection monitor (QAF21.. or QAF61..) can be defined with rotary switches LO and UP.			
Position of LO	Sequence control start point	Position of UP	QAF21.. / QAF61.. operating range
0		1	QAF21..
0		2	QAF61..

**Calibration**  
SKD62.., SKD60


In order to determine the stroke positions 0 % and 100 % in the valve, calibration is required on initial commissioning:

**Prerequisites**

- Mechanical coupling of the actuator SKD6.. with a Siemens valve
- **⚠ Actuator must be in «Automatic operation» enabling stroke calibration to capture the effective 0 % and 100 % values**
- AC 24 V power supply
- Housing cover removed

**Calibration**

1. Short-circuit contacts in calibration slot (e.g. with a screwdriver)
2. Actuator moves to «0 %» stroke position (1) (valve closed)
3. Actuator moves to «100 %» stroke position (2) (valve open)
4. Measured values are stored

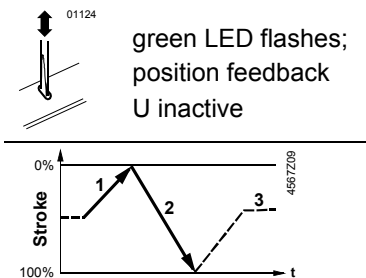

**Normal operation**

5. Actuator moves to the position (3) as indicated by signals Y or Z  
green LED is lit permanently; position feedback U active, the values correspond to the actual positions

A lit red LED indicates a calibration error.  
The calibration can be repeated any number of times.  
The LED status indication indicates operational status with dual-colored LED and is visible with removed cover.

**Indication of operating state**  
SKD62.., SKD60

LED	Indication	Function	Remarks, troubleshooting
<b>Green</b>	Lit	Normal operation	Automatic operation; everything o.k.
	Flashing	Calibration in progress	Wait until calibration is finished (LED stops flashing, green or red LED will be lit)
<b>Red</b>	Lit	Faulty stroke calibration	Check mounting Restart stroke calibration (by short-circuiting calibration slot)
	Flashing	Internal error	Replace electronics
<b>Both</b>	Dark	Inner valve jammed	Check valve
		No power supply Electronics faulty	Check mains network, check wiring Replace electronics

As a general rule, the LED can assume only the states shown above (continuously red or green, flashing red or green, or off).

**Override control input Z**  
SKD62..., SKD60

Override control input can be operated in following different modes of operation


		<b>Z-mode</b>				
		no function	fully open	closed	override with 0...1000 Ω	Signal addition SKD62UA only
<b>Connections</b>						
	<b>Transfer</b>					
		linear or equal-percentage			linear or equal-percentage	linear or equal-percentage
		<ul style="list-style-type: none"> <li>Z-contact not connected</li> <li>Valve stroke follows Y-input</li> </ul>	<ul style="list-style-type: none"> <li>Z-contact connected directly to G</li> <li>Y-input has no effect</li> </ul>	<ul style="list-style-type: none"> <li>Z-contact connected directly to G0</li> <li>Y-input has no effect</li> </ul>	<ul style="list-style-type: none"> <li>Z-contact connected to M via resistor R</li> <li>Starting position at 50 Ω / end position at 900 Ω</li> <li>Y-input has no effect</li> </ul>	<ul style="list-style-type: none"> <li>Z-contact is connected to R of the frost protection monitor QAF21... or QAF61...</li> <li>Valve stroke follows signals Y and R(Z)</li> </ul>

Note Shown operation modes are based on the factory setting «direct acting»  
Y-input has no effect in Z-mode.

**Accessories**

**SKD..**


**ASZ6.5**  
stem heater

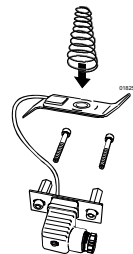

for media below 0 °C; mount between valve and actuator


**SKD32..., SKD82..**

**ASC9.3**  
double auxiliary switch

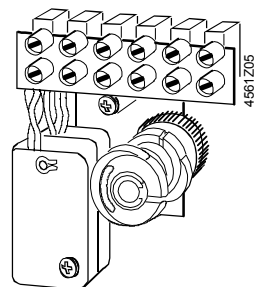


adjustable switching points

**ASZ7.3..**  
potentiometer

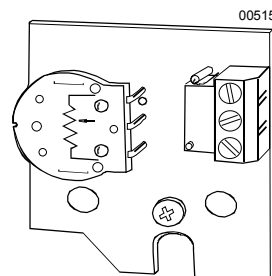

ASZ7.3: 0...1000 Ω  
ASZ7.31: 0...135 Ω  
ASZ7.32: 0...200 Ω


**ASK50**  
stroke inverter

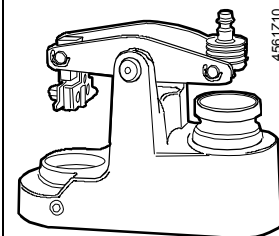

0 % actuator stroke corresponds to 100 % valve stroke; mount between valve and actuator



**ASC1.6**  
auxiliary switch



switching point 0...5 % stroke

See section «Technical data» on page 11 for more information.

**Engineering notes**

Conduct the electrical connections in accordance with local regulations on electrical installations as well as the internal or connection diagrams.

**Caution** ⚠

**Safety regulations and restrictions designed to ensure the safety of people and property must be observed at all times!**


**Caution** ⚠

**For media below 0 °C the ASZ6.5 stem heater is required to keep the valve from freezing. For safety reasons the stem heater is designed for an operating voltage of AC 24 V / 30 W.**

**For this case, do not insulate the actuator bracket and the valve stem, as air circulation must be ensured. Do not touch the hot parts without prior protective measures to avoid burns.**

**Non-observance of the above may result in accidents and fires!**

**Recommendation: Above 140 °C insulating the valves is strictly recommended.**

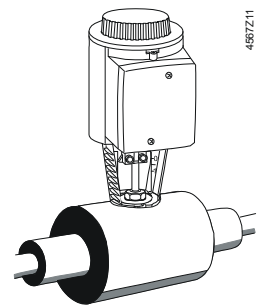

Observe admissible temperatures, refer to «Use» on page 1 and «Technical data» on page 11.

If an auxiliary switch is required, its switching point should be indicated on the plant schematic.


Every actuator must be driven by a dedicated controller (refer to «Connection diagrams», page 14).

**Mounting instructions**

Mounting Instruction 74 319 0325 0 for fitting the actuator to the valve are by packed in the actuator packaging. The instructions for accessories are enclosed with the accessories themselves.


Accessories	Installation instructions	Accessory	Mounting instructions
<b>ASC1.6</b>	G4563.3	<b>ASZ6.5</b>	M4563.7
<b>ASC9.3</b>	G4561.3	<b>ASK50</b>	M4561.5
<b>SKD...</b>		<b>ASZ7.3...</b>	
		<b>SKD...</b>	M3250
	4 319 5544 0		4 319 5564 0
	4 319 5545 0		4 319 5549 0
	74 319 0326 0		74 319 0247 0
			74 319 0325 0

Orientation

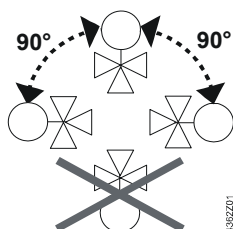


When commissioning the system, check the wiring and functions, and set any auxiliary switches and potentiometers as necessary, or check the existing settings.

Coupling fully retracted  
→ stroke = 0%

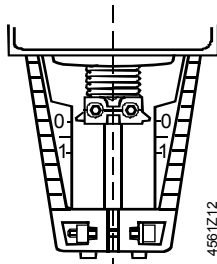


Coupling fully extended  
→ stroke = 100 %

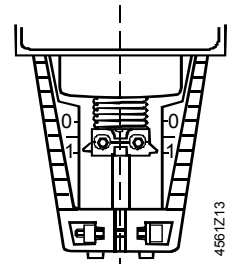


**The manual adjuster must be rotated counterclockwise to the end stop, i.e. until the red indicator marked «MAN» is no longer visible. This causes the Siemens valves, types VVF.., VVG.., VXF.. and VXG.. to close (stroke = 0%).**

Manual operation

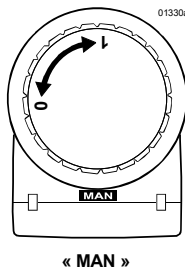

Automatic operation

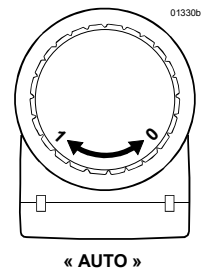

Maintenance notes

The SKD.. actuators are maintenance-free.



When servicing the actuator:

- Switch off pump of the hydronic loop
  - Interrupt the power supply to the actuator
  - Close the main shutoff valves in the system
  - Release pressure in the pipes and allow them to cool down completely
  - If necessary, disconnect electrical connections from the terminals
  - The actuator must be correctly fitted to the valve before recommissioning.
- Recommendation SKD6..: trigger stroke calibration.

Repair

«Replacement parts», see page 17.



**Warning**

**A damaged housing or cover represents an injury risk**

- **NEVER** uninstall an actuator from the valve
- **Uninstall the valve-actuator combination (actuating device) as a complete device**
- **Use only properly trained technicians to uninstall the unit**
- **Send the actuating device together with an error report to your local Siemens representative for analysis and disposal**
- **Properly mount the new actuating device (valve and actuator)**

Parts could fly ultimately resulting in injuries from uninstalling an actuator with a damaged valve housing due to the tensioned return spring.

**Disposal**



The device contains electrical and electronic components and must not be disposed of together with domestic waste. This applies in particular to the PCB.

Legislation may demand special handling of certain components, or it may be sensible from an ecological point of view.

**Current local legislation must be observed.**

## Warranty

The technical data relating to specific applications are valid only in conjunction with the valves listed in this Data Sheet under «Equipment combinations», page 3.



**The use of the actuators in conjunction with third-party valves invalidates all claims under Siemens Switzerland Ltd warranty.**

## Technical data

		SKD32..	SKD82..	SKD6..
Power supply	Operating voltage	AC 230 V	AC 24 V	AC 24 V
	Voltage tolerance	± 15 %	± 20 %	-20 % / +30 %
		SELV / PELV		
	Frequency	50 or 60 Hz		
Max. Power consumption At 50 Hz	SKD32.21:	20 VA / 13 W	SKD82.50, ..50U 13 VA / 8 W	17 VA / 12 W
	SKD32.50:	16 VA / 11 W	SKD82.51, ..51U 18 VA, 11 W	
	SKD32.51:	21 VA, 13 W		
External supply cable fuse	min. 0.5 A, slow max. 6 A, slow	min. 1 A, slow max. 10 A, slow		
Signal inputs	Control signal	3-position		DC 0...10 V, DC 4...20 mA or 0...1000 Ω
	Terminal Y	Voltage Input impedance Current Input impedance Signal resolution Hysteresis		DC 0...10 V 100 kΩ DC 4...20 mA 240 Ω < 1% 1 %
	Terminal Z	Resistor Z not connected		1000 Ω
	Override control	Z connected directly to G Z connected directly to G0 Z connected to M via 0...1000 Ω		No function, priority terminal Y max. stroke 100 % min. stroke 0 % stroke proportional to R
Position feedback	Terminal U	voltage load impedance current load impedance		DC 0...9,8 V ±2 % > 10 kΩ DC 4...19,6 mA ±2 % < 500 Ω
	Operating data	Positioning time at 50 Hz		
opening		SKD32.5.. 120 s SKD32.21 30 s	SKD82.5.. 120 s	30 s
Closing		SKD32.5.. 120 s SKD32.21 10 s	SKD82.5.. 120 s	15 s
Spring-return time (closing)		SKD32.21 8 s SKD32.51 8 s SKD32.50 -	SKD82.51 8 s SKD82.50 -	SKD62.. 15 s SKD60 -
Positioning force	1000 N			
Nominal stroke	20 mm			
Max. permissible medium temperature	-25...150 °C < 0 °C: requires stem heater ASZ6.5			
Electrical connections	Cable entry	4 x M20 (Ø 20.5 mm)		
	..U	With knockouts for standard ½" conduit connectors (Ø 21.5 mm)		

		SKD32..	SKD82..	SKD6..
Norms and standards	CE-conformity EMC-directive	2004/108/EC		
	Immunity	EN 61000-6-2 Industrial		
	Emission	EN 61000-6-3 Residential		
	Low voltage directive	2006/95/EC		
	Electrical safety	EN 60730-1		
	Product standards for automatic electric controls	EN 60730-2-14		
	Protection standard EN 60730	I	III	
	Housing protection standard Upright to horizontal	IP54 to EN 60529		
	Conform with UL standards	SKD82..U	UL 873	
		SKD62U, SKD62UA		UL873
C-tick		N474	N474	
Environmental compatibility	ISO 14001 (Environment) ISO 9001 (Quality) SN 36350 (Environmentally compatible products) RL 2002/95/EG (RoHS)			
Dimensions / weight	Dimensions	refer to «Dimensions», page 16		
Weight	SKD32.50 3.60 kg	SKD82.50 3.60 kg		
	-	SKD82.50U 3.85 kg	SKD60/62 3.60 kg	
	SKD32.21 3.65 kg	SKD82.51 3.65 kg	SKD62U/UA 3.85 kg	
	SKD32.51 3.65 kg	SKD82.51U 3.90 kg		
Materials	ASK50 stroke inverter	1.10 kg		
	Actuator housing, bracket	Die-cast aluminum		
	Housing box and manual adjuster	Plastic		
<b>Accessories</b>	<b>SKD32.., SKD82..</b>		<b>SKD6..</b>	
ASC1.6 Auxiliary switch	Switching capacity	AC 24 V, 10 mA...4 A resistive, 2 A inductive		
ASC9.3 double auxiliary switch	Switching capacity per auxiliary switch	AC 250 V, 6 A resistive, 2.5 A inductive		
ASZ7.3 Potentiometer	Change in overall resistance of potentiometer at nominal stroke	ASZ7.3 0...1000 Ω		
		ASZ7.31 0...135 Ω		
		ASZ7.32 0...200 Ω		
	min. current in sliding contact	0,05 mA		
	expected lifetime	250'000 full lifts		
	max. current in sliding contact	2,5 mA		
	expected lifetime	100'000 full lifts		
ASZ6.5 stem heater	Operating voltage	AC 24 V ± 20 %		
	Power consumption	30 VA		

## SKD62UA enhanced functions


Direction of operation	Direct-acting, reverse-acting	DC 0...10 V / DC 10...0 V DC 4...20 mA / DC 20...4 mA 0...1000 Ω / 1000...0 Ω
Stroke limit control	Range of lower limit Range of upper limit	0...45 % adjustable 100...55 % adjustable
Sequence control	Terminal Y Starting point of sequence Operating range of sequence	0...15 V adjustable 3...15 V adjustable
Signal addition	Z connected to R of Frost protection monitor QAF21... Frost protection monitor QAF61...	0...1000 Ω, added to Y signal DC 1.6 V, added to Y signal

## General ambient conditions

	Operation EN 60721-3-3	Transport EN 60721-3-2	Storage EN 60721-3-1
Environmental conditions	Class 3K5	Class 2K3	Class 1K3
Temperature	-15...+50 °C	-30...+65 °C	-15...+50 °C
Humidity	5...95 % r.h.	< 95 % r.h.	5...95 % r.h.


## Internal diagrams

### SKD32.51, SKD32.21 AC 230 V, 3-Position

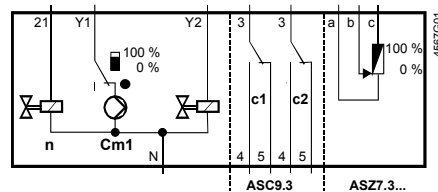


- Cm1** end switch
- n** solenoid valve for spring-return
- c1, c2** ASC9.3 double auxiliary switch
- a, b, c** ASZ7.. potentiometer
- Y1** Positioning signal «open»
- Y2** Positioning signal «close»
- 21** spring-return function
- N** neutral conductor

### SKD32.50 AC 230 V, 3-Position

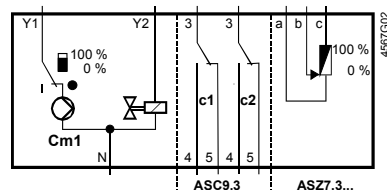


### SKD82.51 AC 24 V, 3-Position

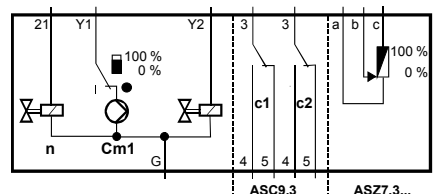


- Cm1** end switch
- n** solenoid valve for spring-return
- c1, c2** ASC9.3 double auxiliary switch
- a, b, c** ASZ7.. potentiometer
- Y1** Positioning signal «open»
- Y2** Positioning signal «close»
- 21** spring-return function
- G** System potential

### SKD82.50 AC 24 V, 3-Position

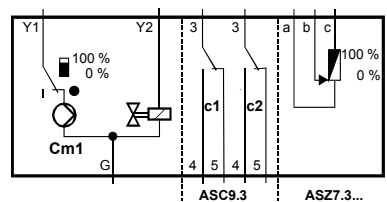


### SKD60, SKD62 SKD62U, SKD62UA AC 24 V, DC 0...10 V, 4...20 mA, 0...1000 Ω

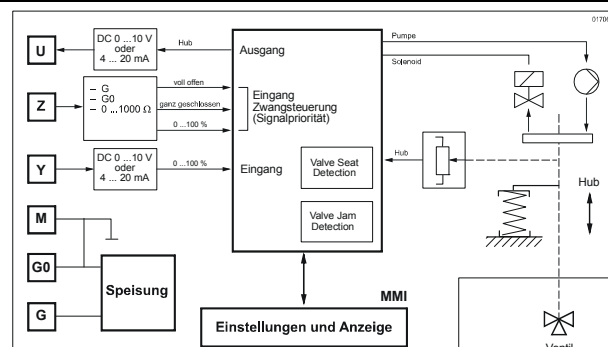


- U** position indication
- Z** override control
- Y** positioning signal
- M** measuring neutral
- G0** operating voltage AC 24 V: system neutral (SN)
- G** operating voltage AC 24 V: system potential (SP)

**Connection terminals**

**SKD6..**

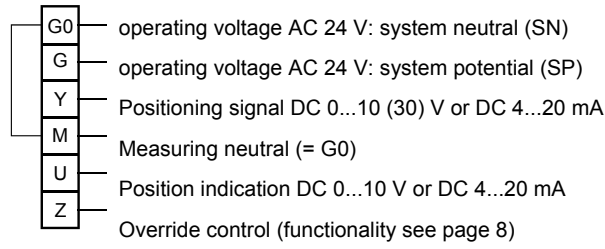


**Auxiliary switch  
ASC1.6**

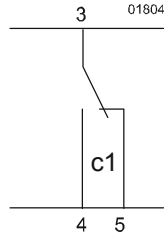

**Connection diagrams**


**SKD32..  
AC 230 V  
3-Position**

**SKD32.21, SKD32.51**

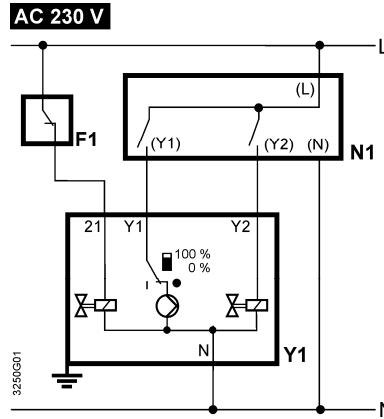

- F1** temperature limiter
- N1, N2** controller
- Y1, Y2** actuators
- L** Phase
- N** neutral


**SKD32.50**

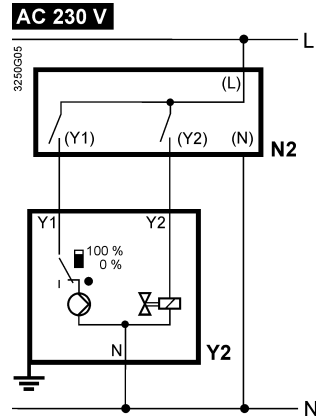

- Y1** Positioning signal «open»
- Y2** Positioning signal «close»
- 21** Spring-return function


**SKD82..  
AC 24 V  
3-Position**

**SKD82.51, SKD82.51U**

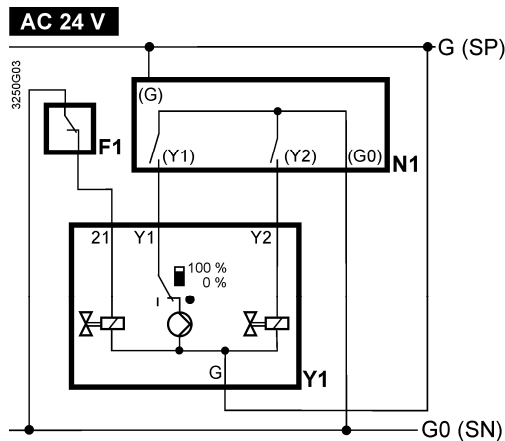

- F1** temperature limiter
- N1, N2** controller
- Y1, Y2** actuators
- SP** Systempotential AC 24 V
- SN** System neutral


**SKD82.50, SKD82.50U**

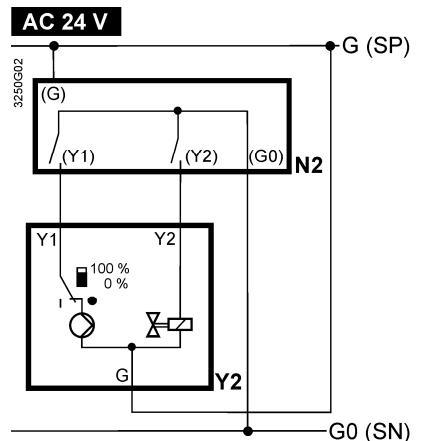


- (Y1), (Y2)** controller contacts
- Y1** Positioning signal «open»
- Y2** Positioning signal «close»
- 21** Spring-return function

**SKD6..**  
 AC 24 V  
 DC 0...10 V, 4...20 mA,  
 0...1000 Ω

**SKD60**

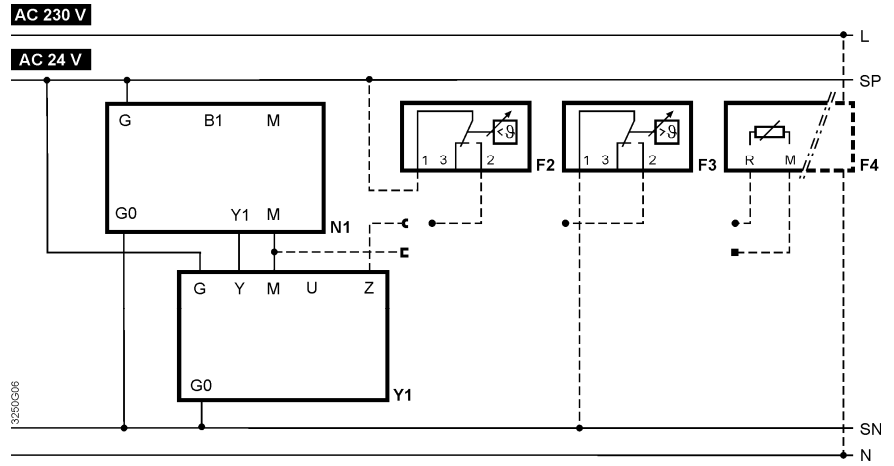

**SKD62**  
**SKD62U**  
**SKD62UA**

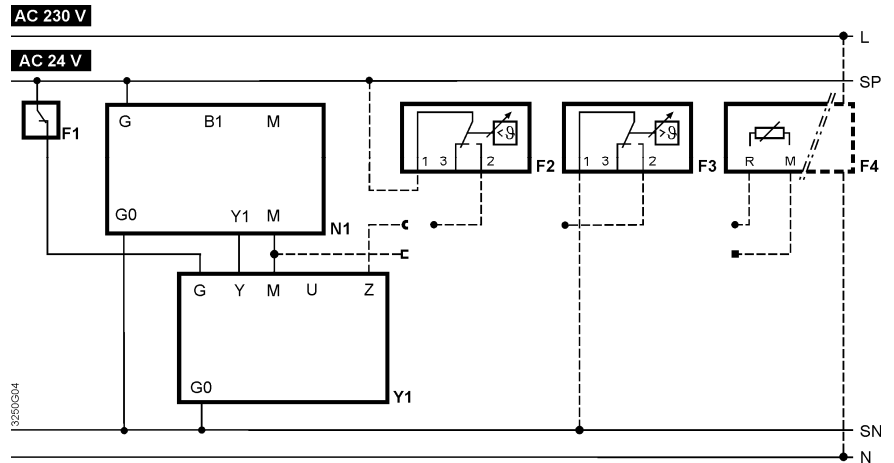


- Y1** actuator
- N1** controller
- F1** temperature limiter
- F2** frost protection thermostat  
 terminals: 1 – 2 frost hazard / sensor is interrupted (thermostat closes with frost)  
 1 – 3 normal operation
- F3** Temperature detector
- F4** Frost protection monitor with 0...1000 Ω signal output, e.g. QAF21.. or QAF61.. (only SKC62UA) \*
- G (SP)** System potential AC 24 V
- G0 (SN)** System neutral

\* Only with sequence control and the appropriate selector switch settings (see page 5ff)


## Dimensions

All dimensions in mm

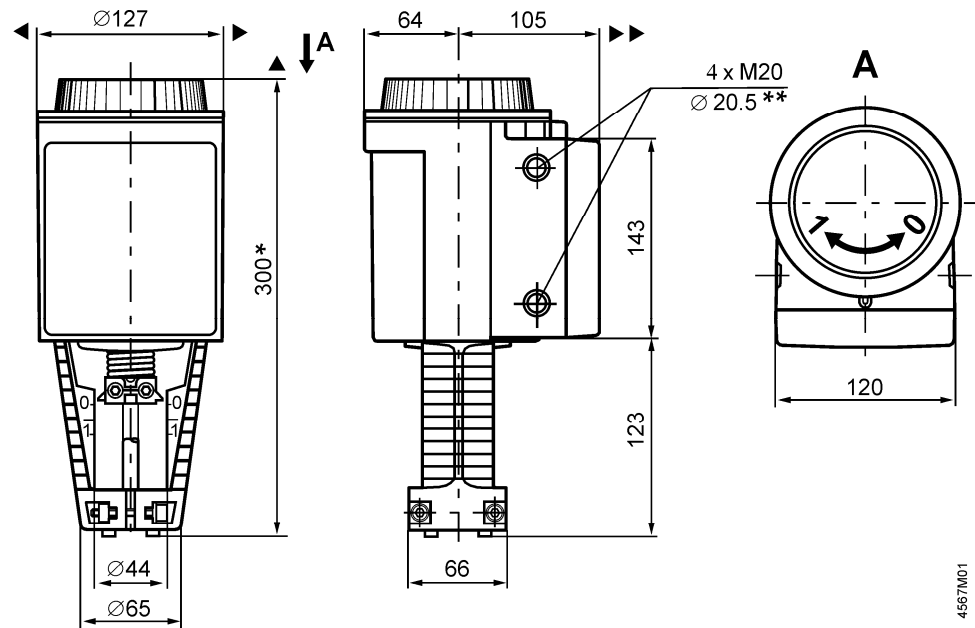

- \* Height of actuator from valve plate without stroke inverter **ASK50 = 300 mm**  
Height of actuator from plate with stroke inverter **ASK50 = 357 mm**
- \*\* SKD..U with knockouts for standard 1/2" conduit connectors ( $\varnothing 21.5$  mm)
- ▶ = > 100 mm | Minimum clearance from ceiling or wall for mounting,
- ▶▶ = > 200 mm | connection, operation, maintenance etc.

### ASK50 stroke inverter

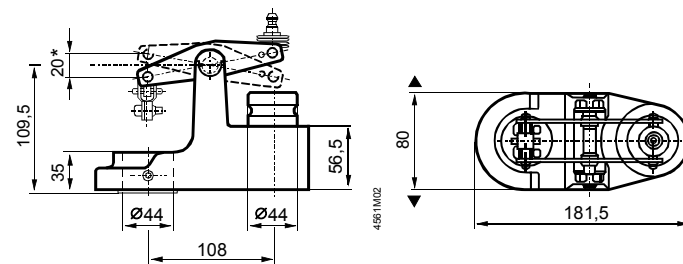

\* Maximum stroke = 20 mm



## Replacement parts

Order numbers for replacement parts

	Cover	Hand control <sup>1)</sup>	Control unit
<b>Actuator type</b>			
<b>SKD32.50</b>	410456348	426855048	
<b>SKD32.51</b>	410456348	426855048	
<b>SKD32.21</b>	410456348	426855048	
<b>SKD82.50</b>	410456348	426855048	
<b>SKD82.50U</b>	410456348	426855048	
<b>SKD82.51</b>	410456348	426855048	
<b>SKD82.51U</b>	410456348	426855048	
<b>SKD62</b>	410456348	426855048	466857488
<b>SKD62U</b>	410456348	426855048	466857488
<b>SKD60</b>	410456348	426855048	466857598
<b>SKD62UA</b>	410456348	426855048	466857518

1) hand control, blue with mechanical parts

## Revision numbers

Type reference	Valid from Rev.-No.
SKD32.50	..E
SKD32.51	..E
SKD32.21	..E
SKD82.50	..E
SKD82.50U	..E
SKD82.51	..E
SKD82.51U	..E
SKD62	..G
SKD62U	..G
SKD60	..G
SKD62UA	..G

